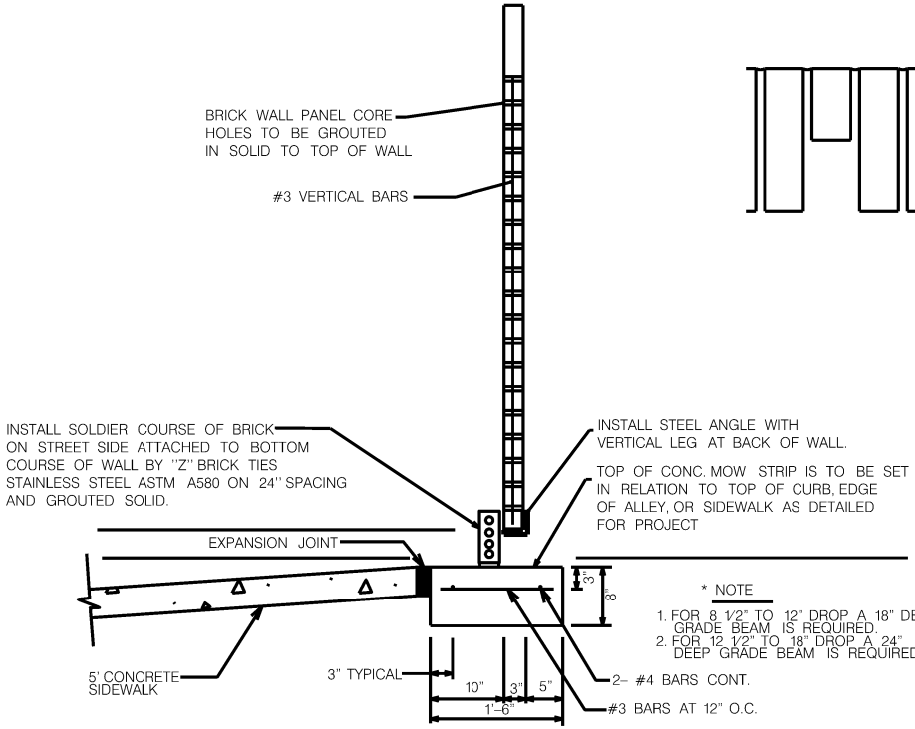

SECTION

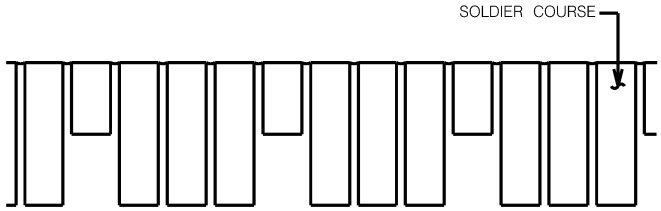

CROSS DRAINAGE

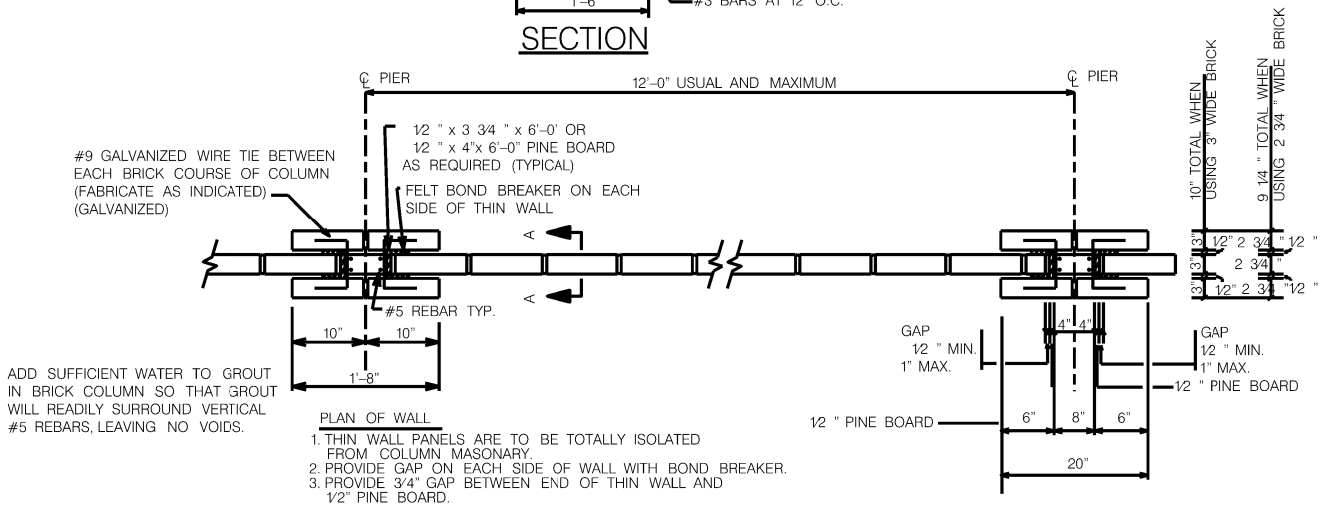

ADD SUFFICIENT WATER TO GROUT IN BRICK COLUMN SO THAT GROUT WILL READILY SURROUND VERTICAL #5 REBARS, LEAVING NO VOIDS.

PLAN OF WALL

1. THIN WALL PANELS ARE TO BE TOTALLY ISOLATED FROM COLUMN MASONARY.
2. PROVIDE GAP ON EACH SIDE OF WALL WITH BOND BREAKER.
3. PROVIDE 3/4" GAP BETWEEN END OF THIN WALL AND 1/2" PINE BOARD.
4. CONSTRUCT MOW STRIP PRIOR TO CONSTRUCTING THIN WALL PANEL.
5. CONSTRUCT BRICK THIN WALL PANEL WITH STEEL ANGLE FOR FULL LENGTH OF WALL PANEL AND WITH TEMPORARY SUPPORTS ALONG WALL PANEL. TEMPORARY SUPPORTS ARE TO REMAIN IN PLACE FOR 30 DAYS.
6. PLACE GROUT TO TOP OF COLUMN AND TROWEL SMOOTH. FILL ALL CORE HOLES IN BRICK AND TROWEL SMOOTH.

PLAN

NOTE:
ANY SCREENING WALL REQUIRED BY THE GENERAL DEVELOPMENT ORDINANCE SHALL BE CONSTRUCTED AND ACCEPTED PRIOR TO THE ISSUANCE OF ANY BUILDING PERMITS. THE COST OF THE SCREENING WALL CANNOT BE ESCROWED UNDER THE PERFORMANCE ESCROW POLICY AS PART OF THE PUBLIC IMPROVEMENTS.

NOTE:
DETAIL SUBJECT TO CHANGE PER DIRECTION OF CITY OF LEWISVILLE ENGINEERING DIVISION.

LEWISVILLE
Deep Roots. Broad Wings. Bright Future.

Standard Details

Standard Thin Wall Screening Wall

Revisions:

No.	Description	Date

Engineering Department

Office No. 972-219-3460

www.cityoflewisville.com

Dated: 2-27-13

Dated: 09-04-2019

Sheet: 6.2